



? ASUS-ep20 ????? Elastix <http://downloads.sourceforge.net/sou...-29sep2008.iso> ? (???SD CARD?????)????
 ?????????????????????

?? [ep20_atl2_linux_lan_driver.ko](#)????? USB ?? mount ? ASUS-ep20??

fdisk -l (??USB?????????)

mkdir /mnt/usb (?????????)

mount -t vfat /dev/sdc1 /mnt/usb (??FAT32??U?) <===/dev/sdc1 ??????fdisk -l???????

mount -t msdos /dev/sdc1 /mnt/usb (??FAT??U?) <===/dev/sdc1 ??????fdisk -l???????

mkdir -p /lib/modules/^uname -r`/kernel/drivers/net/atl2/

cp ep20_atl2_linux_lan_driver.ko /lib/modules/^uname -r`/kernel/drivers/net/atl2/atl2.ko

ls -l /lib/modules/^uname -r`/kernel/drivers/net/atl2/ (?????? CP ? atl2.ko ????????)

vi /etc/modprobe.conf

.....

.....

alias eth0 atl2 <==????

reboot

***** # depmod -a ?????????? ?????????????????????????????????