

???? U-Boot ???

??????? Hit any key to stop autoboot... <?????>???? Marvell ?????  
 Marvell >> ver <??>

????????????????????

1. ????? TFTP ??
2. ?? USB stick (USB ???) ??

?? U-Boot ? v3.4.19??? U-Boot ??

<http://downloads.plugpbx.org/UBOOT/u-boot.bin-3.4.19>

? TFTP ??

// ?? tftp server

[http://tftpd32.jounin.net/tftpd32\\_download.html](http://tftpd32.jounin.net/tftpd32_download.html)

? WindpwsXP ? u-boot.bin-3.4.19 ??? tftpd32 ?????????? u-boot.bin??? tftpd32.exe?

?? SheevaPlug??? mini-USB ?? Console????????????????

Hit any key to stop autoboot... <?????>

Marvell>> dhcp

Marvell>> setenv serverip xxx.xxx.xxx.xxx

Marvell>> bunt u-boot.bin

**\*\*Warning\*\***

If U-Boot Endianes is going to change (LE->BE or BE->LE), Then Env parameters should be overridden..

Override Env parameters? (y/n) <?? n>

Marvell>> reset

TIPs:

??? DHCP ????? IP ?????

Marvell>> setenv ipaddr 111.222.333.444

? USB ?????

?????? <http://www.cyrius.com/debian/kirkwoo...t-upgrade.html>

UBOOT ??

Marvell>> dhcp

Marvell>> setenv serverip 192.168.7.158

```
Marvell>> tftpboot 0x0800000 u-boot.kwb
```