

Asterisk GUI - Digium Inc. ???Web???????????????? Asterisk ??? mini-HTTP server???????? Web Server engine?

????????????,?????????FreePBX?????.?????embedded system? ??????????GUI????.


????

- [Asterisk GUI for Asterisk 1.8](#)

??????????

? DD-WRT ?????????? ?? IP PBX-ASUS WL-520GU ?????

????

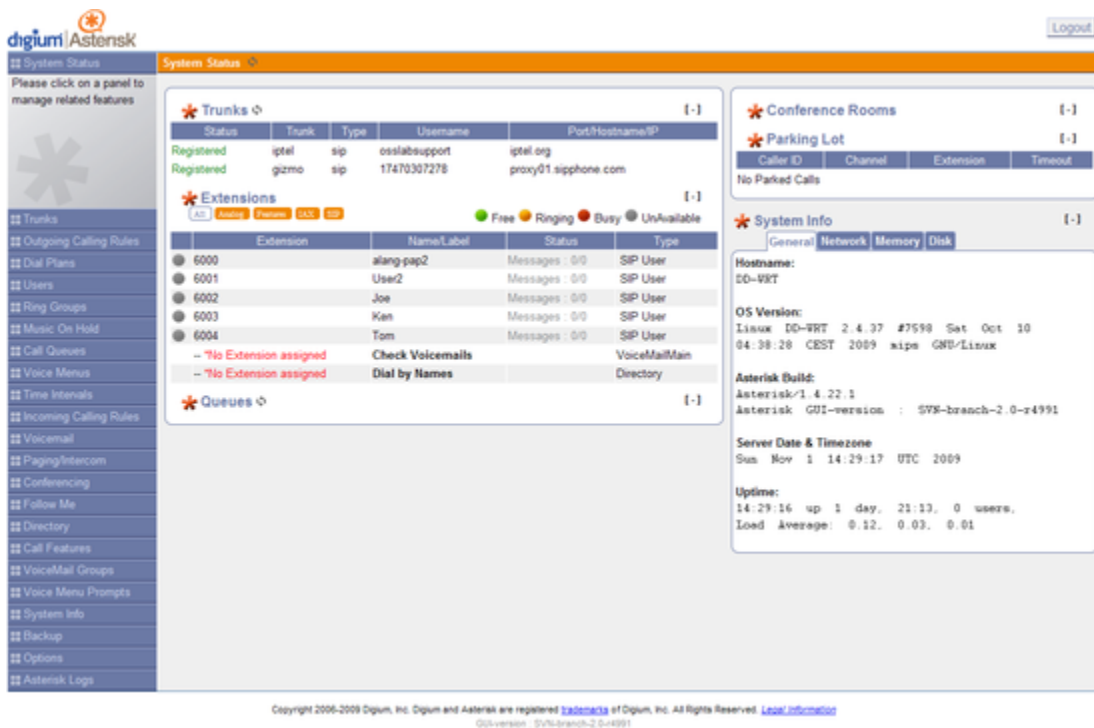

System Status

Please click on a panel to manage related features

Trunks

Status	Trunk	Type	Username	Port/Hostname/IP
Registered	iptel	sip	osslabsupport	iptel.org
Registered	gizmo	sip	17470307278	proxy01.sipphone.com

Extensions

Extension	Name/Label	Status	Type
6000	alang-pap2	Messages: 0/0	SIP User
6001	User2	Messages: 0/0	SIP User
6002	Joe	Messages: 0/0	SIP User
6003	Ken	Messages: 0/0	SIP User
6004	Tom	Messages: 0/0	SIP User
- No Extension assigned		Check Voicemails	VoiceMailMain
- No Extension assigned		Dial by Names	Directory

System Info

OS Version: Linux DD-WRT 2.4.37 #7590 Sat Oct 10 04:38:28 CEST 2009 x86 GNU/Linux

Asterisk Build: Asterisk-1.4.22.1 Asterisk GUI-version : SVN-branch-2.0-r4991

Server Date & Timezone: Sun Nov 1 14:29:17 UTC 2009

Uptime: 14:29:16 up 1 day, 21:13, 0 users, Load Average: 0.12, 0.03, 0.01

??????

1.?? SIP Trunk

? iptel.org ??

UI > Trunks > VOIP Trunks > New SIP/IAX Trunk

Type: SIP

Context Naming: Assigned by Asterisk GUI

Provider Name: iptel

Hostname: iptel.org

Username: <sip_username>

Password: <sip_password>

????????????????????????????????

insecure: **very**

Edit SIP trunk trunk_1 X

Provider Name ⓘ: iptel

Hostname ⓘ: iptel.org

Username ⓘ: osslabssupport

Password : [REDACTED]

Codecs: First : u-law Second : a-law Third : GSM
Fourth : G.726 Fifth : None

CallerID ⓘ: [REDACTED]

FromDomain: [REDACTED]

FromUser: [REDACTED]

AuthUser: [REDACTED]

insecure: very

Outbound Proxy: [REDACTED]

Enable Remote MWI:

? Pennytel ??

Manage SIP & IAX trunks

Analog Trunk

[New SIP2](#)

Pro

Edit SIP trunk trunk_3 X

Provider Name ⓘ: pennytel

Hostname ⓘ: sip.pennytel.com

Username ⓘ: [REDACTED]

Password : [REDACTED]

Codecs: First : G.729 Second : None Third : None
Fourth : None Fifth : None

CallerID ⓘ: [REDACTED]

FromDomain: [REDACTED]

FromUser: [REDACTED]

AuthUser: [REDACTED]

insecure: no

Outbound Proxy: [REDACTED]

Enable Remote MWI:

isable	Edit	X Delete
B	Edit	X Delete
isable	Edit	X Delete

???

? UI ?????????????????? **Apply Changes**??????????????

2.?? Outbound Route

????????????????? 013 ??

UI > Outgoing Calling Rules > New Calling Rule

Calling Rule Name: **iptel**

Pattern: **_013**

Send this call through trunk:

-> Use Trunk: **iptel**

-> Strip: **3**

-> and Prepend these digits: ??

Edit Calling Rule [X]

Calling Rule Name ⓘ : iptel

Pattern ⓘ : _013.

Send to Local Destination ⓘ

Destination : [v]

Send this call through trunk: [x]

Use Trunk ⓘ iptel [v]

Strip ⓘ 3 digits from front

and Prepend these digits ⓘ [] before dialing

Use FailOver Trunk ⓘ :

fail over Trunk ⓘ gizmo [v]

Strip ⓘ [] digits from front

and Prepend these digits ⓘ [] before dialing

[Cancel] [Save]

3.?? Dial Plan

????????????????? dial plan????? internal?

UI > Dial Plans > New Dialplan

DialPlan Name: **internal**

Include Outgoing Calling: **iptel**

Include Local Contexts: ??

??

include outgoing calling ??? Trunk?

include local contexts ??????????????????

Edit DialPlan

DialPlan Name:

Include Outgoing Calling Rules: iptel gizmo_out

Include Local Contexts: default parkedcalls conferences ringgroups voicemenus que
page_an_extension

4????

UI > Users > Create New User

Extension: **6000** ????????

CallerID Name: ????(??)

DialPlan: **internal**

Technology:

-> **SIP**

VoIP Settings:

-> **NAT, Password**

????????????????

??

????????????? SIP ? IAX2 ??? users.conf??????? sip.conf/iax.conf ??????????????????

Edit User Extension - 6000
Advanced Edit X

General :

Extension: i CallerID Name: i DialPlan: i

Internal CallerID: i CallerID Number: i

Enable Voicemail for this User i

VoiceMail Access PIN code: i Email Address: i

Technology

SIP i IAX i Analog Station: i flash i: rxflash i:

Codec Preference : First :

VoIP Settings

MAC Address : i Line Number : i LineKeys: i SIP/IAX Password:

i NAT: i Can Reinvite: i DTMF Mode: i insecure: i

Other Options

3-Way Calling (analog) i In Directory i Call Waiting (analog) i

ADA User i Is Agent i Pickup Group:

5.?? Inbound Route

UI > Incoming Calling Rules > New Incoming Rule

Trunk: **iptel**

Time Interval: **None**

Pattern: **s**

Destination: **????**

Tips:

```
s ?????? CallerID ????
```

```
_2NXXXX ?? CallerID ? 2 ??????
```

??????

?? Linux ??)

```
#>cd /usr/src/
```

```
#>svn co http://svn.digium.com/svn/asterisk-gui/branches/2.0 asterisk-gui
```

```
#>cd asterisk-gui
#>sh configure && make && make install
```

?? Embedded System ??)

```
??? embedded system ?????????????????????????????????????????????????????????????
```

1. ?? DD-WRT ???
2. ???/? ??????????
 - Asterisk ??? - /opt/etc/asterisk
 - Asterisk GUI - /opt/var/lib/asterisk
 - Asterisk Sound - /opt/var/lib/asterisk

```
???????????????????????? WinSCP ?????? DD-WRT ? USB drive?????????-IP PBX ASUS WL-520GU ??? ??? /mnt/?
```

```
?????? >
```

```
#>cd /opt/var/lib/asterisk
#>mv scripts scripts_bak
#>mv static-http static-http_bak
```

```
????? >
```

```
#>cd /mnt
#>tar -xzf astgui20_build-r4991_ddwrt_by_20091122.tar.gz
#>cd astgui20_build-r4991_ddwrt_by_20091122
#>cp -R scripts static-http /opt/var/lib/asterisk
```

```
?? Asterisk ??
```

```
???? GUI ?????????????? /opt/etc/asterisk ?????????????????????????????????
```

```
??????
```

```
???? Asterisk ???
```

```
Asterisk#1)
```

```
Host IP = 192.168.1.1
```

```
Extension = 1XXX
```

```
Context Name = default-ast1 ;?? context ?????? 1XXX ?????????????????? context ???
```

```
Asterisk#2)
```

```
Host IP = 192.168.1.2
```

```
Extension = 2XXX
```

```
Context Name = default-ast2 ;?? context ?????? 2XXX ?????????????????? context ???
```

```
? Asterisk#1
```

```
1. ??????????
```

```
UI > Options > Advanced Options > Show Advanced Options
```

```
2. ?? IAX trunk
```

UI > File Editor > iax.conf > Add Context > ?? ast-2-interconnect????

```
type=friend
host=192.168.1.2
trunk=yes
disallow=all
allow=ulaw
qualify=yes
context=default-ast1
peercontext=default-ast2
```

3. ?? Outbound Route

UI > File Editor > extensions.conf > Add Context > ?? trunk_out????

```
exten=_016.,1,Macro(trunkdial,IAX2/ast-2-interconnect/${EXTEN:3})
```

```
???????????? 016 + ????????
```

? Asterisk#2

1. ????????

UI > Options > Advanced Options > Show Advanced Options

2. ?? IAX trunk

UI > File Editor > iax.conf > Add Context > ?? ast-1-interconnect????

```
type=friend
host=192.168.1.1
trunk=yes
disallow=all
allow=ulaw
qualify=yes
context=default-ast2
peercontext=default-ast1
```

3. ?? Outbound Route

UI > File Editor > extensions.conf > Add Context > ?? trunk_out????

```
exten=_016.,1,Macro(trunkdial,IAX2/ast-1-interconnect/${EXTEN:3})
```

```
???????????? 016 + ????????
```

Q & A

Q: ?? URL ??????????????

A: ?? /etc/http.conf

bindaddr = 0.0.0.0

bindport = 80

prefix =

enablestatic = yes

redirect = / /static/config/index.html

????

>asterisk -rx "http show status"

HTTP Server Status:

Prefix:

Server Enabled and Bound to 0.0.0.0:80

Enabled URI's:

/httpstatus => Asterisk HTTP General Status

/phoneprov/... => Asterisk HTTP Phone Provisioning Tool

/amanager => HTML Manager Event Interface w/Digest authentication

/arawman => Raw HTTP Manager Event Interface w/Digest authentication

/manager => HTML Manager Event Interface

/rawman => Raw HTTP Manager Event Interface

/static/... => Asterisk HTTP Static Delivery

/amxml => XML Manager Event Interface w/Digest authentication

/mxml => XML Manager Event Interface

Enabled Redirects:

/ => /static/config/index.html

Q: ?? Debug ??????????????

A??? config/js/session.js

log: true, /*< boolean toggling logging */

??????

- [Developing for the Asterisk GUI](#)