


?????????????:

| System Information | | |
|-----------------------|---|--|
| Host Name | FWF60C3G [Change] | |
| Serial Number | FWF60C3G | |
| Operation Mode | NAT [Change] | |
| HA Status | Standalone [Configure] | |
| System Time | Thu Oct 25 14:58:40 2012 (3.tw.pool.ntp.org) [Change] | |
| Firmware Version | v5.0,build0120 (Interim) [Update] [Details] | |
| System Configuration | [Backup] [Restore] [Revisions] | |
| Current Administrator | admin [Change Password] /2 in Total [Details] | |
| Uptime | 0 day(s) 0 hour(s) 23 min(s) | |

??modem????????, ???CLI???modem??.

```
FWF60C3G11012569 # config sys mod
FWF60C3G11012569 (modem) # set status enable
FWF60C3G11012569 (modem) # end
FWF60C3G11012569 #
```

????, ??FGT?web-based manager??GUI?????. ?System>Network???????Modem??.

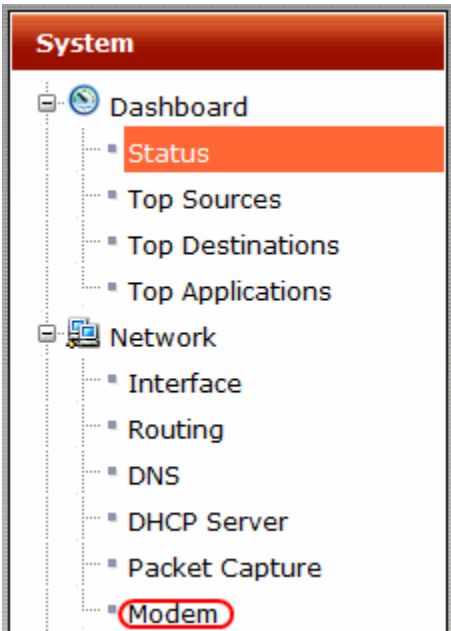

?????????3G USB modem??, ??????????????:

Enable Modem

General Settings

Primary Modem External Modem Dial Now

Mode Standalone Redundant

Dial Mode Dial on demand Always Connect

External Modem

Status Inactive

Modem [Configure Modem]

Phone Number

User Name

Password

?????, ???FGT?database?, ??????3G USB modem???????, ??[Configure Modem]???????????

| Vendor | |
|----------------------|----------|
| ▼ Custom | |
| ▼ Supported (v1.014) | |
| | AirPrime |
| | Alcatel |
| | Audiovox |
| | Cmotech |
| | Dell |
| | Emobile |
| | Emobile |
| | Huawei |
| | Huawei |
| | Huawei |
| | Huawei |

???????????, Vendor ID?Product ID. ???Telit UM20???

Vendor

Model

Vendor ID (Hex)

Product ID (Hex)

Init String

????????????ID??(bug?!), ??????CLI????:

```

config system 3g-modem custom
edit 1
    set vendor "Telit"
    set model "UM20"
    set vendor-id 1bc7
    set product-id 1002
next
end

```

?????, ???20~50???, ?????System>Network>Modem??, ??????????.

External Modem

Status ⬇ Inactive

Modem Telit - UM20 [Configure Modem]

Phone Number

User Name

Password

?????????????, ?????reboot????????????FGT???3G USB modem?. ?????, ?????CLI?????:

```

FWF60C3G11012569 # diag sys mod detect
modem is attached.

```

???, ??????????.

??System>Network>Modem, ?????????, ?????, ???(Apply). ???3G?????, ??????????:

Phone Number

User Name

Password

*99#?????????, ??????????. ?????????????????, ???(?????).

?????, ???3G?????????, ?????????????, ?????AT Command. ??, ?????CLI??:

```

FWF60C3G11012569 # diag sys mod cmd
<at> AT command for modem

```

?cmd????????AT Command????, ?????????AT?????????:

```

FWF60C3G11012569 # diag sys mod cmd at+cgdcont=1
at+cgdcont=1
OK

```

????????OK, ?????????AT????3G????????; ??, ???ERROR, ?????PIN??SIM????, ?????AT????????, ?????????????
PIN?(????????, ?????):

```

FWF60C3G11012569 # diag sys mod cmd at+cpin="\0000\"

```

??OK?????, ?????????AT????????, ??????. ?????????.

????????CLI??, ?????AT????FGT?modem????:

```

at+cpin="\0000\"
at+cgdcont=1, "ip\", "internet\"

```

??CLI????AT??, ?????:

```

config system modem
  set status enable
  set pin-init "0000"
  set phonel "*99#"
  set extra-init1 "at+cgdcont=1,\"ip\", \"internet\""
end

```

pin-init????????at+cpin??, ??????, ???PIN??.

??get????????, ?????(?????):

```

FWF60C3G11012569 (modem) # get
status          : enable
pin-init        : 0000
mode            : standalone
auto-dial       : disable
dial-on-demand  : disable
idle-timer      : 5
redial          : none
holddown-timer  : 60
connect-timeout : 90
wireless-port   : 0
phonel          : *99#

```

??, wireless-port????ttyusb0??, ??????????. pin-init????????????, ???reboot??, ?????!

reboot????, ???System>Network>Modem, ??Dial Now????????, ?????:

Enable Modem

General Settings

Primary Modem External Modem Dial Now

Mode Standalone Redundant

Dial Mode Dial on demand Always Connect

External Modem

Status ⬇ Inactive

Modem Telit - UM20 [[Configure Modem](#)]

Phone Number

User Name

Password

?????, ??????, ?????:

Enable Modem

General Settings

Primary Modem: External Modem Hang Up

Mode: Standalone Redundant

Dial Mode: Dial on demand Always Connect

External Modem

Status: Connecting...

Modem: Telit - UM20 [[Configure Modem](#)]

Phone Number: *99#

User Name:

Password:

?Connecting????, ????Hang Up????????, ????, ??20~30???, ????System>Network>Modem?????????????, ?????? ??????:

Enable Modem

General Settings

Primary Modem: External Modem Hang Up

Mode: Standalone Redundant

Dial Mode: Dial on demand Always Connect

External Modem

Status: ✔ Connected (0:01:18)

Modem: Telit - UM20 [[Configure Modem](#)]

Phone Number: *99#

User Name:

Password:

Connected??????, ??3G??????????, ??????????????, ????CLI????????(??FGT????????????3G??).

```
FWF60C3G11012569 (modem) # show
config system modem
  set status enable
  set pin-init "0000"
  set auto-dial enable
  set phone1 "*99#"
  set extra-init1 "at+cgdcont=1,\"ip\", \"internet\""
end
```

??????3G????????????????????, ??????, ???????????????.

???????, ??System>Network>Interface?????Modem??????IP??.

| <input type="checkbox"/> | Name | IP/Netmask |
|--------------------------|-----------------------|--------------------------------|
| <input type="checkbox"/> | dmz | 10.10.10.1 / 255.255.255.0 |
| <input type="checkbox"/> | wan2 | 192.168.101.99 / 255.255.255.0 |
| <input type="checkbox"/> | wan1 | 60.250.189.166 / 255.255.255.0 |
| <input type="checkbox"/> | modem | 42.71.159.99 / 255.255.255.255 |
| <input type="checkbox"/> | internal | 192.168.1.99 / 255.255.255.0 |
| <input type="checkbox"/> | wifi (SSID: fortinet) | 10.10.80.1 / 255.255.255.0 |

?????????, ??????3G???FGT?????

Notes: Dial Now???CLI?????: exe mod dial ; ??(Hang Up)??exe mod hangup