

????????? Audio ?????????????????????? USB ??????

???? USB ????????????

1. USB ?????????? ALSA ??
2. ??? STLinux Kernel????? ALSA ??????????????
3. ?????????????? ALSA ??????
4. ?? ALSA ????
 - ? stlinux23-sh4-alsa-lib
 - ? stlinux23-sh4-alsa-utils
 - ? stlinux23-sh4-alsaplayer
5. ??????

???? Linux kernel

????

?????.config ? General setup ??? CONFIG_SOUND=m
?: ?????????????????????? m ? y

CONFIG_SOUND=m

#

General setup

#

....

Advanced Linux Sound Architecture (SND) [N/m/?] (NEW) m

Sequencer support (SND_SEQUENCER) [N/m/?] (NEW) m

Sequencer dummy client (SND_SEQ_DUMMY) [N/m/?] (NEW) m

OSS Mixer API (SND_MIXER_OSS) [N/m/?] (NEW) m

OSS PCM (digital audio) API (SND_PCM_OSS) [N/m/?] (NEW) m

OSS PCM (digital audio) API - Include plugin system (SND_PCM_OSS_PLUGINS) [Y/n/?] (NEW) y

OSS Sequencer API (SND_SEQUENCER_OSS) [N/y/?] (NEW) y

Dynamic device file minor numbers (SND_DYNAMIC_MINORS) [N/y/?] (NEW) y

Support old ALSA API (SND_SUPPORT_OLD_API) [Y/n/?] (NEW) y

Verbose procfs contents (SND_VERBOSE_PROCFS) [Y/n/?] (NEW) y

Verbose printk (SND_VERBOSE_PRINTK) [N/y/?] (NEW) n

Debug (SND_DEBUG) [N/y/?] (NEW) n

*

* Generic devices

*

Dummy (/dev/null) soundcard (SND_DUMMY) [N/m/?] (NEW) m

Virtual MIDI soundcard (SND_VIRMIDI) [N/m/?] (NEW) m

MOTU MidiTimePiece AV multiport MIDI (SND_MTPAV) [N/m/?] (NEW) n

UART16550 serial MIDI driver (SND_SERIAL_U16550) [N/m/?] (NEW) n

Generic MPU-401 UART driver (SND_MPU401) [N/m/?] (NEW) n

```

*
* USB devices
*
USB Audio/MIDI driver (SND_USB_AUDIO) [N/m/] (NEW) m
Native Instruments USB audio devices (SND_USB_CAIAQ) [N/m/] (NEW) n

*
* System on Chip audio support
*
ALSA for SoC audio support (SND_SOC) [N/m/] (NEW) m
*
* STMicroelectronics SoCs support
*
STMicroelectronics SoCs support (SND_STM) [N/m/] (NEW) m
Name of BPA2 partition to allocate buffers from (SND_STM_BPA2_PARTITION_NAME) [audio]
(NEW)
STx7100 and STx7109 support (SND_STM_STX710X) [N/m/] (NEW) m
STx7105 support (SND_STM_STX7105) [M/n/] (NEW) m
STx7111 support (SND_STM_STX7111) [N/m/] (NEW) m
STx7141 support (SND_STM_STX7141) [N/m/] (NEW) m
STx7200 support (SND_STM_STX7200) [N/m/] (NEW) m
Dummy converter driver (SND_STM_CONV_DUMMY) [N/m/] (NEW) m
Generic GPIO-controlled converter driver (SND_STM_CONV_GPIO) [N/m/] (NEW) m
Generic I2C-controlled converter driver (SND_STM_CONV_I2C) [N/m/] (NEW) m

*
* Open Sound System
*
Open Sound System (DEPRECATED) (SOUND_PRIME) [N/m/] (NEW) n

```

????

```

make ARCH=sh CROSS_COMPILE=sh4-linux- vmlinux
make ARCH=sh CROSS_COMPILE=sh4-linux- modules
make ARCH=sh CROSS_COMPILE=sh4-linux- modules_install INSTALL_MOD_PATH=./modules_install

```

make the vmlinux.ub

```

sh4-linux-objcopy -O binary vmlinux vmlinux.bin
gzip --best --force vmlinux.bin
mkimage -A sh -O linux -T kernel -C gzip -a 0x80800000 -e 0x80801000 -n "Linux 2.6" -d vmlinux.bin.gz
vmlinux.ub

```

???? ALSA-Lib ? ALSA-Utils ??

?????: <http://www.alsa-project.org/main/index.php/Download>

alsa-lib

```
CC=sh4-linux-gcc \
./configure --host=sh4-linux
```

make

make install DESTDIR=/home/alang/STLinux_Cross-Compile/build_opt/alsa-lib

alsa-utils

```
CC=sh4-linux-gcc \
./configure --host=sh4-linux
```

make

make install DESTDIR=/home/alang/STLinux_Cross-Compile/build_opt/alsa-utils

?? ALSA ????

???????????

/lib/modules/2.6.23.17_stm23_A18B-PDK7105-32BITS-A18B/kernel/sound

????

```
modprobe soundcore
modprobe snd-usb-audio
modprobe snd-pcm-oss
modprobe snd_seq_midi
modprobe snd_seq_oss
```

TIP:

????????????? depmod -a

???????????

```
root@localhost:/dev/snd# lsmod | grep snd
soundcore          6468  1 snd
snd                49972  7
snd_usb_audio,snd_pcm,snd_timer,snd_usb_lib,snd_rawmidi,snd_seq_device,snd_hwdep
snd_hwdep          7492  1 snd_usb_audio
snd_seq_device     6860  1 snd_rawmidi
snd_rawmidi        22496  1 snd_usb_lib
snd_timer          21060  1 snd_pcm
snd_pcm            78373  1 snd_usb_audio
snd_page_alloc     6376  1 snd_pcm
```

```
snd_usb_lib      15712 1 snd_usb_audio
snd_usb_audio    80128 0
```

?? /etc/modprobe.conf (???)

```
# ALSA portion
alias char-major-116 snd
alias snd-card-0 snd-usb-audio
options snd-usb-audio nrpacks=1

# OSS/Free portion
alias char-major-14 soundcore
alias sound-slot-0 snd-card-0

# card #1
alias sound-service-0-0 snd-mixer-oss
alias sound-service-0-1 snd-seq-oss
alias sound-service-0-3 snd-pcm-oss
alias sound-service-0-12 snd-pcm-oss
```

TIPs:

?? modprobe.conf ?????? APP ?? aplay -l?????????????????

?? alsa.conf
 ??? alsa-lib ???<alsa-lib>/usr/share/alsa/alsa.conf ??? /usr/share/alsa/alsa.conf
 ???????? alsa.conf?

```
pcm.!default {
    type hw
    card 0
}
pcm.hw {
    type hw
    card 0
    device 0
    subdevice 0
}
ctl.!default {
    type hw
    card 0
}
ctl.hw {
    type hw
    card 0
}
```

?????

???? audio

vi /etc/group

?????

audio:*:1000:

?????? dev_snd_all.tar.gz

mkdir /dev/snd

chmod 0755 /dev/snd

tar xzf dev_snd_all.tar.gz -C /dev/snd

????

root@localhost:/dev/snd# ls -l /dev/snd

```
crw-rw--- 1 root  audio  116,  5 Jan  1 2000 controlC0
crw-rw-rw- 1 root  audio  116, 32 Feb 24 16:56 controlC1
crw-rw--- 1 root  audio  116,  4 Jan  1 2000 pcmC0D0c
crw-rw--- 1 root  audio  116,  3 Jan  1 2000 pcmC0D0p
crw-rw-rw- 1 root  audio  116, 25 Feb 24 16:56 pcmC0D1c
crw-rw-rw- 1 root  audio  116, 17 Feb 24 16:56 pcmC0D1p
crw-rw-rw- 1 root  audio  116, 26 Feb 24 16:56 pcmC0D2c
crw-rw-rw- 1 root  audio  116, 18 Feb 24 16:56 pcmC0D2p
crw-rw--- 1 root  audio  116,  1 Feb 24 16:56 seq
crw-rw--- 1 root  audio  116,  2 Jan  1 2000 timer
```

Q&A

?? alsamixer????? Error opening terminal: vt102.

Ans??? STLinux ????? /opt/STM/STLinux-2.3/devkit/sh4/target/usr/share/terminfo/v/vt102 ????? usr/share/terminfo/v/vt102

????

- <http://alsa.opensrc.org/AlsaBuild2.6>
- <http://alsa.opensrc.org/TroubleShooting>
- <http://snowwolf725.blogspot.tw/>