

??? NAT ???

?? NextPBX ????? IP(10.x.x.x ? 192.168.x.x)??? IP ????????????????? NAT ???

???????? IP Phone ????????? SIP ?????????????????????????????????

1. ? IP ????????????????? 'Port Forwarding' ???? Port 5060, 10000-10100 UDP(??: ?? TCP ?)
2. ? NextPBX ???Web-UI(Advanced) > SIP Settings > NAT
 - ? Extern IP: <IP???????????????? IP>
 - ? Extern Host: ????
 - ? Extern Refresh: 10
 - ? Local Network Address: < NextPBX ?????????? 192.168.1.0/255.255.255.0 >
 - ? NAT mode: ????
 - ? Allow RTP Reinvite: ????
3. Apply Changes
4. ?? NextPBX

