

??? NAT ???

?? NextPBX ????? IP(10.x.x.x ? 192.168.x.x)??? IP ???????????????? NAT ???

????????? IP Phone ?????????? SIP ?????????????????????????????????

1. ? IP ???????????????? 'Port Forwarding' ??? Port 5060, 10000-10100 UDP(??: ?? TCP ?)
2. ? NextPBX ???Web-UI(Advanced) > SIP Settings > NAT
 - ? Extern IP: <IP??????????????? IP>
 - ? Extern Host: ????
 - ? Extern Refresh: 10
 - ? Local Network Address: < NextPBX ?????????? 192.168.1.0/255.255.255.0 >
 - ? NAT mode: ????
 - ? Allow RTP Reinvite: ????
3. Apply Changes
4. ?? NextPBX

The screenshot shows the 'SIP (Session Initiation Protocol) Configuration' web interface. The 'NAT' tab is selected, and the following fields are visible:

- Extern ip: 8.8.8.8
- Extern Host: (empty)
- Extern Refresh: 10
- Local Network Address: 10.1.1.0/255.255.255.255
- NAT mode: (dropdown menu)
- Allow RTP Reinvite: (checkbox)

Buttons for 'Cancel' and 'Save' are located at the bottom of the configuration area.