

Manage Link Speed????MegaRAID SAS 6Gb/s????????, ??MegaRAID 5.x?????. ??????target device??Link Speed????, ???6Gb/s??3Gb/s. ??????Auto, ???RAID f/w?????target device?????Link Speed.

????????????, ??????????. ??????????????. Manage Link Speed?????LSISAS2208 RoC MR????????, ?????????? ??????????. ???target device?Link Speed?????, ???6Gb/s SSD, ??RAID f/w?????3Gb/s, ?????????????????.

Manage Link Speed???MegaRAID v5.x???, ???Native Connector??Narrow Links?????. ?WebBIOS Configuration Utility?, ??Controller Properties????Link Speed???????Phy port, ???Narrow Link, ??????. ?? ??????:

????????, ?????????Native Connectors(Wide-ports)??Narrow Links?????. ?????Direct-Attach??, ???PDs?????. ?????SAS Expander????, ?????????SAS Expander, ?????PDs?Link Speed:

????????, ??Direct-Attach?????PDs??RAID Controller, ??Manage Link Speed?????????PDs????, Link Speed?? ?. ???SAS Expander??, ?????????SAS Expander?RAID Controller??, ???SAS Expander?PDs?????. ??MegaRAID Storage Manager????, ??????????:

??Manage Link Speed???, ?????????, ??????:

????Native Connector?Link Speed????, ?????????SAS Address????????, ?????????SAS Expander, ??? PHY????????Port, ?????Native Connectors??8?Narrow Links?????????. ?????MegaRAID Storage Manager(MSM)????Controller Properties View????????SAS Address 0, ?????SAS Expander?:

????Link Speed?, ??Ok?????????:

????????????????????, ?RAID f/w??RAID Controller??BIOS initializing???Link Speed. ?TTY Log????? Manage Link Speed?????, ??????:

????????PHY?Link Speed?(After), curr_lr?????, ???PHY????????.