nTurbo?????NP4??????IPS????.??????flow-based UTM?traffic??NPU??.???????CPU loading????.

NTurbo offloads firewall sessions that include flow-based security profiles to NP4 or NP6 network processors.

Without NTurbo, or with NTurbo disabled, all firewall sessions that include flow-based security profiles are processed by the FortiGate CPU.

NTurbo can only offload firewall sessions containing flow-based security profiles if the session could otherwise have been offloaded except for the presence of the flowbased security profiles. If something else prevents the session from being offloaded, NTurbo will not offload that session.

Firewall sessions that include proxy-based security profiles are never offloaded to network processors and are always processed by the FortiGate CPU.


nTurbo????????:

- 1. ??proxy-based UTM
- 2. ??DoS-policy

SoC3???NP6lite???.??????nTurbo????.?default????, nTurbo??????.

```
FGT60E4Q16068668 (global) # get
fail-open
                    : disable
                    : regular
database
traffic-submit
                    : disable
anomaly-mode
                    : continuous
session-limit-mode : heuristic
intelligent-mode
                    : enable
socket-size
                    : 32 (MB)
                    : 0
engine-count
algorithm
                    : engine-pick
sync-session-ttl : enable
np-accel-mode : basic
                    : advanced
cp-accel-mode
skype-client-public-ipaddr:
deep-app-insp-timeout: 86400
deep-app-insp-db-limit: 100000
FGT60E4Q16068668 (global) #
```


??policy???, ???UTM profile?????flow-based.

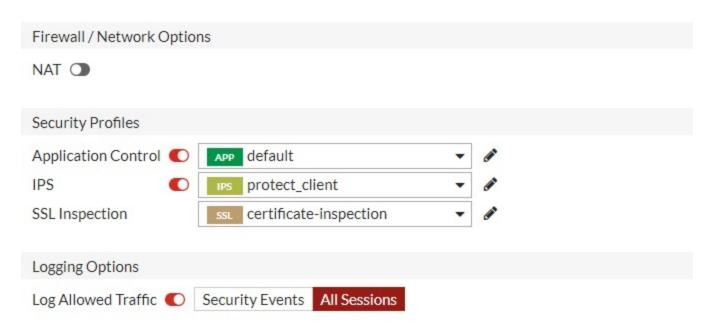

???Session widget??nTurbo???????.



?????policy????counter?????SPU?nTurbo???????? ???????, ????????(tooltip)

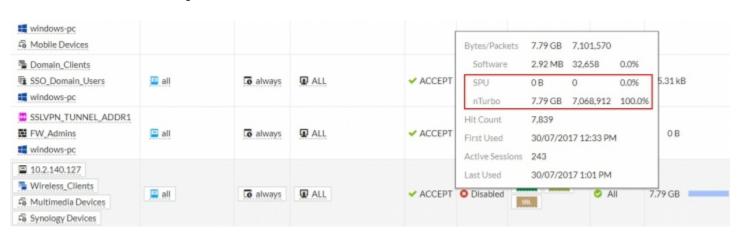

* FortiSoC3???NP6lite??????H/W Traffic Shaper, ???????nTurbo??....