




# How to load xell on corona v2 to get your CPUKey by Glitch360Team. FREE FOR ALL!

No need to swap your 4GB nand with a 16MB nand, no soldering resistors at all, just using the corona v2 as it is.

Required:

- \*1x MMC/SD card Read/Writer
- \*Agw26-28 wire, (do not use kynar!)
- \*AGW24 wire
- \*1x 68 Ohm Resistor (can you use from 60 to 80 ohm)
- \*1 xbox 360 corona v2 (make sure it's at least on 14699, 14719 max!)
- \*Winhex
- \*Xebuild 2.082

Step 1: Wire the card reader to the xbox360 to the UID1 outputs

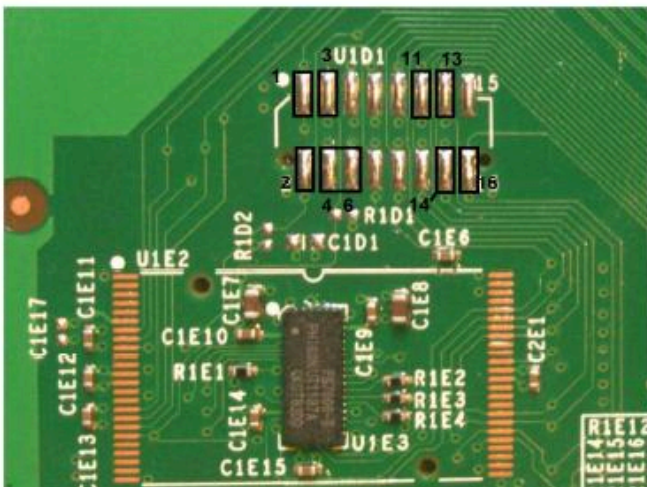

??:

[http://www.eurasia.nu/modules.php?na...sh\\_tutorial\\_r2](http://www.eurasia.nu/modules.php?na...sh_tutorial_r2)

??

<http://www.tvgzzone.com/viewthread.ph...ats&sid=6c1E9P>

<http://bbs.a9vg.com/thread-2239716-1-1.html>

<http://www.5z18.com/html/73-4/4334.htm>

?????????Hacking? ??Dump?Cpu key.??xbox 360 ??????JTAG ????????

?????????EMMC (??phison ??)

?????????Flash IC ??????????JTAG?? ??????????EMMC ???? ??????..

[????](#)