


????

Disks -> Management

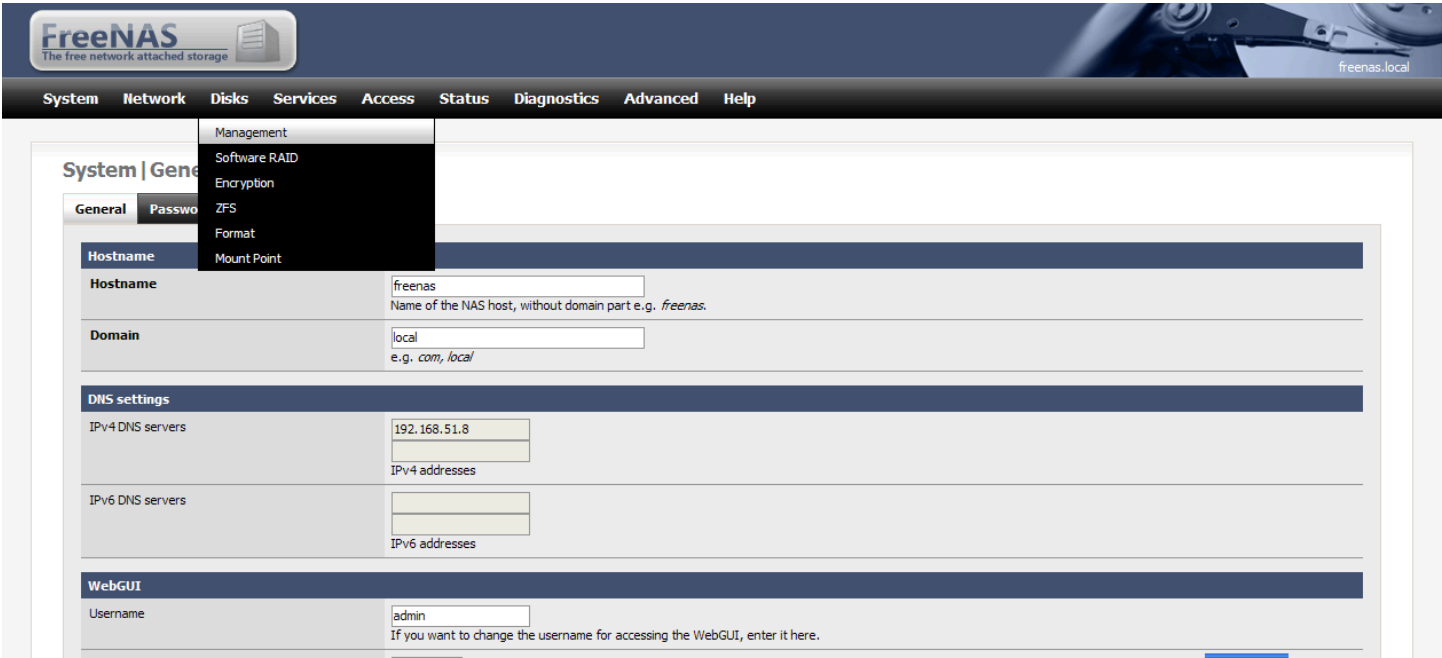

FreeNAS The free network attached storage freenas.local

System Network Disks Services Access Status Diagnostics Advanced Help

System | General

Management
Software RAID
Encryption
ZFS
Format
Mount Point

General Password

Hostname freenas
Name of the NAS host, without domain part e.g. *freenas*.

Domain local
e.g. *com*, *local*

DNS settings

IPv4 DNS servers 192.168.51.8
IPv4 addresses

IPv6 DNS servers
IPv6 addresses

WebGUI

Username admin
If you want to change the username for accessing the WebGUI, enter it here.

???????



Disks | Management

Management S.M.A.R.T. iSCSI Initiator

Disk	Size	Description	Standby time	File system	Status
------	------	-------------	--------------	-------------	--------

FreeNAS © 2005-2008 by Olivier Cochard-Lahbe. All rights reserved.

Disk = ?? ad0 ?????????? SD ?????????? da0?

Description = ????

Preformatted file system = ?? JFS(GPT and Soft Updates)

Disks | Management | Disk | Add

Management **S.M.A.R.T.** iSCSI Initiator

Disk ad0: 76320MB (ST980210AS/3,ALC) ad0 > 內接SATA硬碟

Description ad0: 76320MB (ST980210AS/3,ALC)
da0: 1950MB (Generic- Multi-Card 1.00)
cd0: NA (GIGABYTE GO-D1600E F8S1) da0 > 2GB SDHC 記憶卡

Transfer mode: Auto

Hard disk standby time: Always on

Advanced Power Management: Disabled

Acoustic level: Disabled

S.M.A.R.T.: Activate S.M.A.R.T. monitoring for this device.

Preformatted file system: UFS (GPT and Soft Updates)

Add

FreeNAS © 2005-2008 by Olivier Cochard-Labbe. All rights reserved.


?? Apply changes ?????

FreeNAS
The free network attached storage

System Network **Disks** Services Access Status Diagnostics Advanced Help

Disks | Management

Management **S.M.A.R.T.** iSCSI Initiator


 The configuration has been changed.
You must apply the changes in order for them to take effect.

Apply changes

Disk	Size	Description	Standby time	File system	Status
ad0	76320MB	Disk 80GB	Always on	UFS	Initializing

FreeNAS © 2005-2008 by Olivier Cochard-Labbe. All rights reserved.


Disks -> Format ?????????????????????????????????

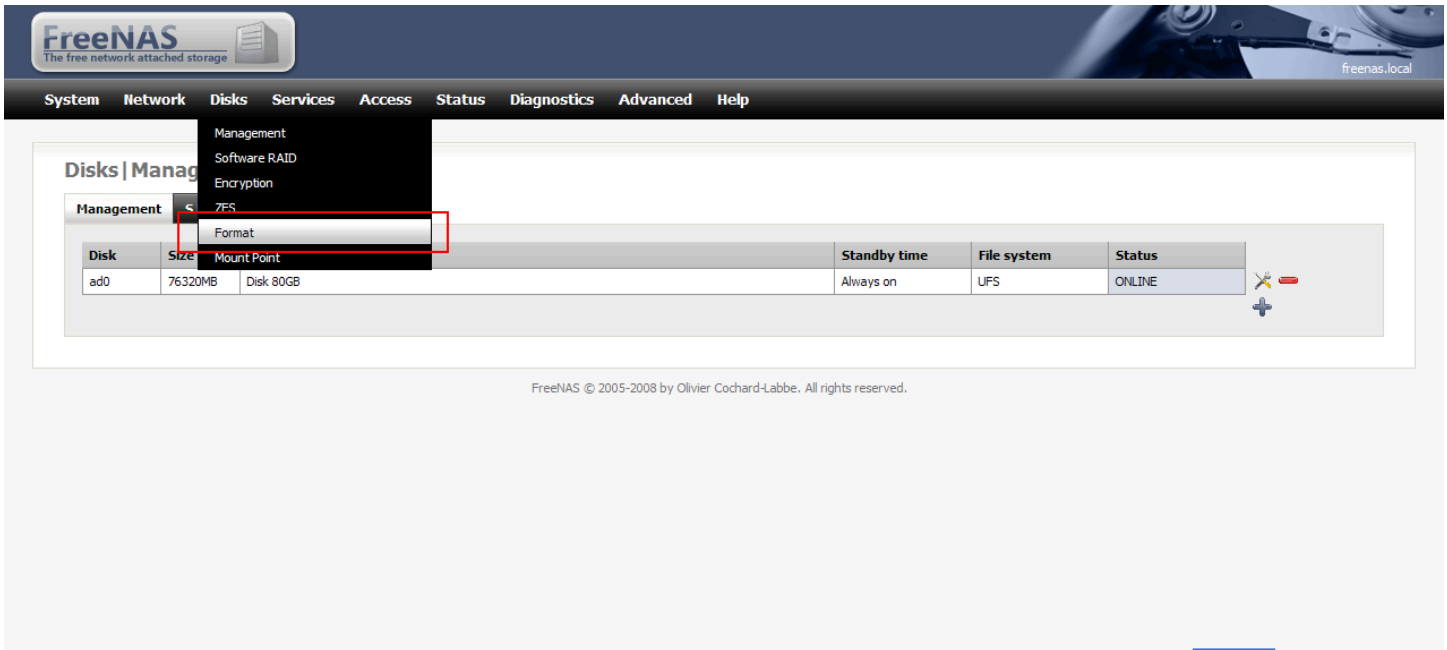


Disk = ?? ad0
 File system = ?? UFS (GPT and Soft Updates)
 ?? Formate disk ????????



Disks -> Mount Point ?????(??)

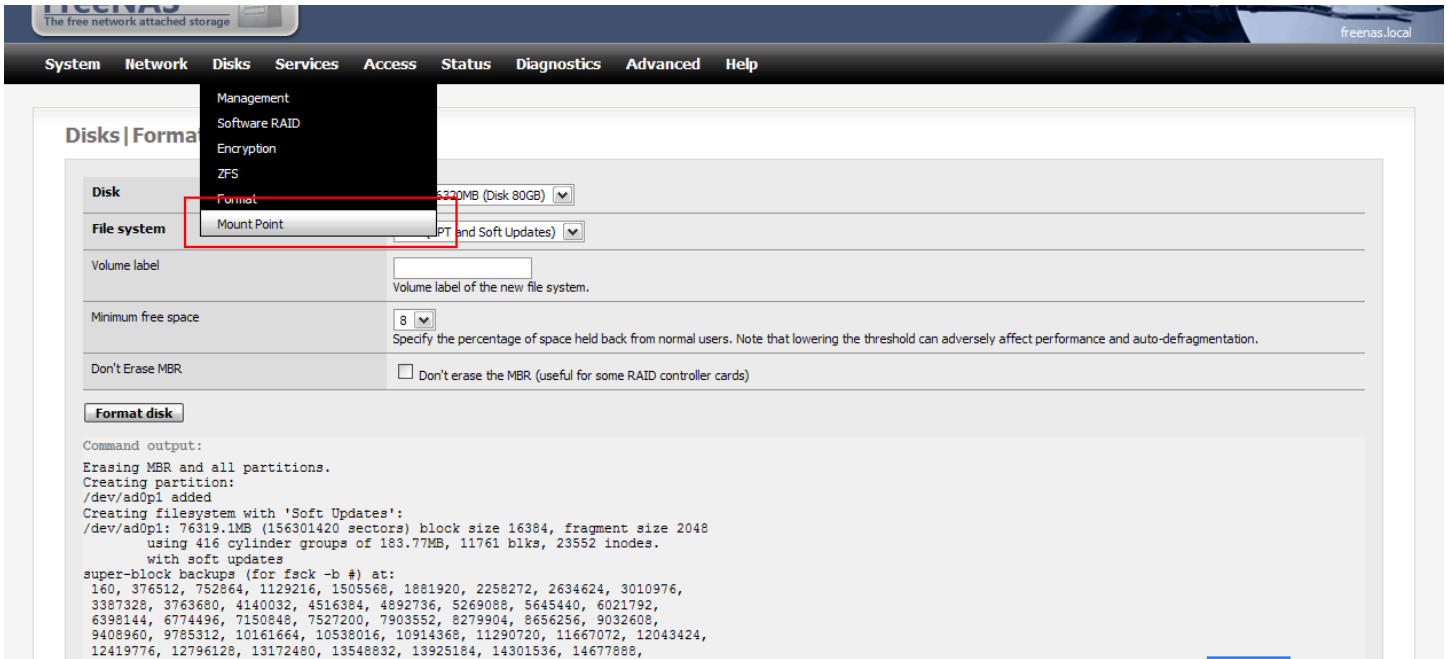

?????

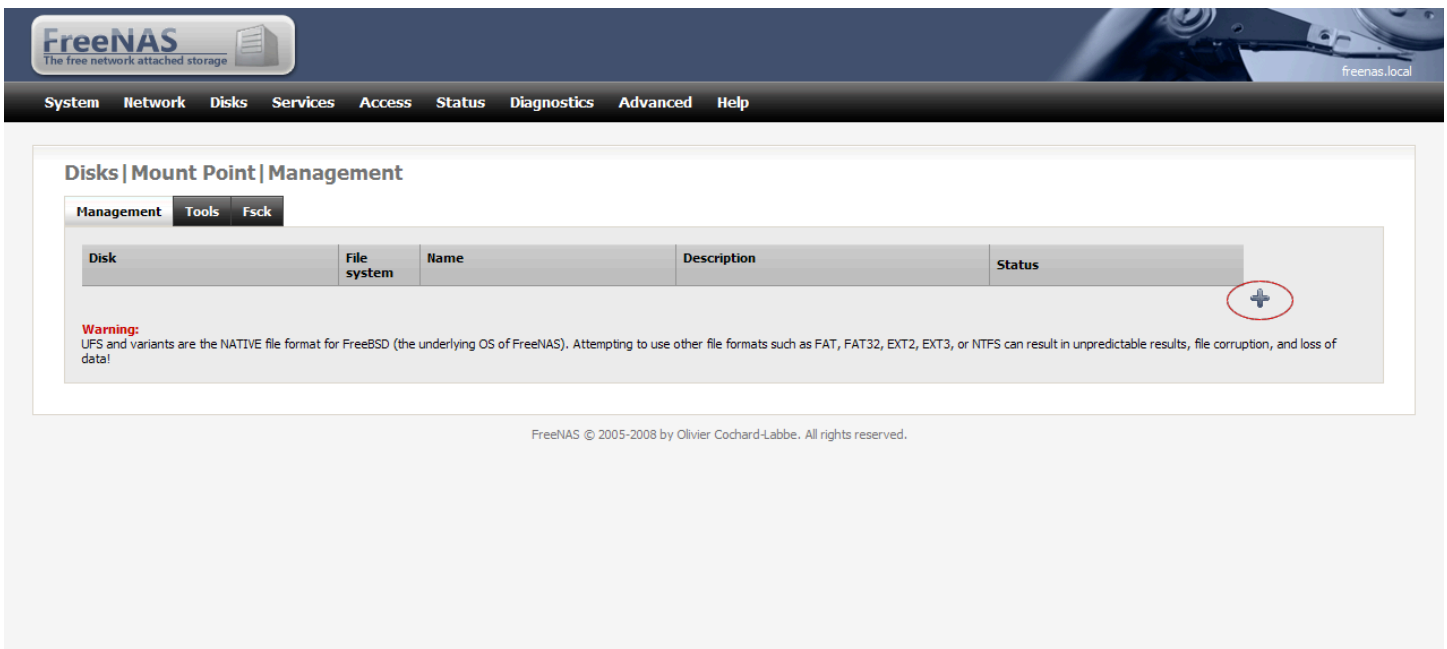

- Disk = ?? ad0
- Partition = EFI GPT
- File system = UFS
- Share name = ?????????? share01?????????? /mnt/share01?
- Description = ????

Disks | Mount Point | Add

Management Tools Fsck

Settings

Type: Disk

Disk: ad0: 76320MB (Disk 80GB)

Partition: EFI GPT

File system: UFS

Share name: share01

Description: This directory is on SATA disk
You may enter a description here for your reference.

Read only: Mount the file system read-only (even the super-user may not write it).

File system check: Enable foreground/background file system consistency check during boot process.

Access Restrictions

Owner: root

? Apply changes ?????

FreeNAS The free network attached storage freenas.local

System Network Disks Services Access Status Diagnostics Advanced Help

Disks | Mount Point | Management

Management Tools Fsck

Apply changes

The configuration has been changed. You must apply the changes in order for them to take effect.

Disk	File system	Name	Description	Status
/dev/ad0p1	ufs	share01	This directory is on SATA disk	Initializing

Warning: UFS and variants are the NATIVE file format for FreeBSD (the underlying OS of FreeNAS). Attempting to use other file formats such as FAT, FAT32, EXT2, EXT3, or NTFS can result in unpredictable results, file corruption, and loss of data!

FreeNAS © 2005-2008 by Olivier Cochard-Labbe. All rights reserved.